


# A Fuel Safety Shutoff Controller SB001A

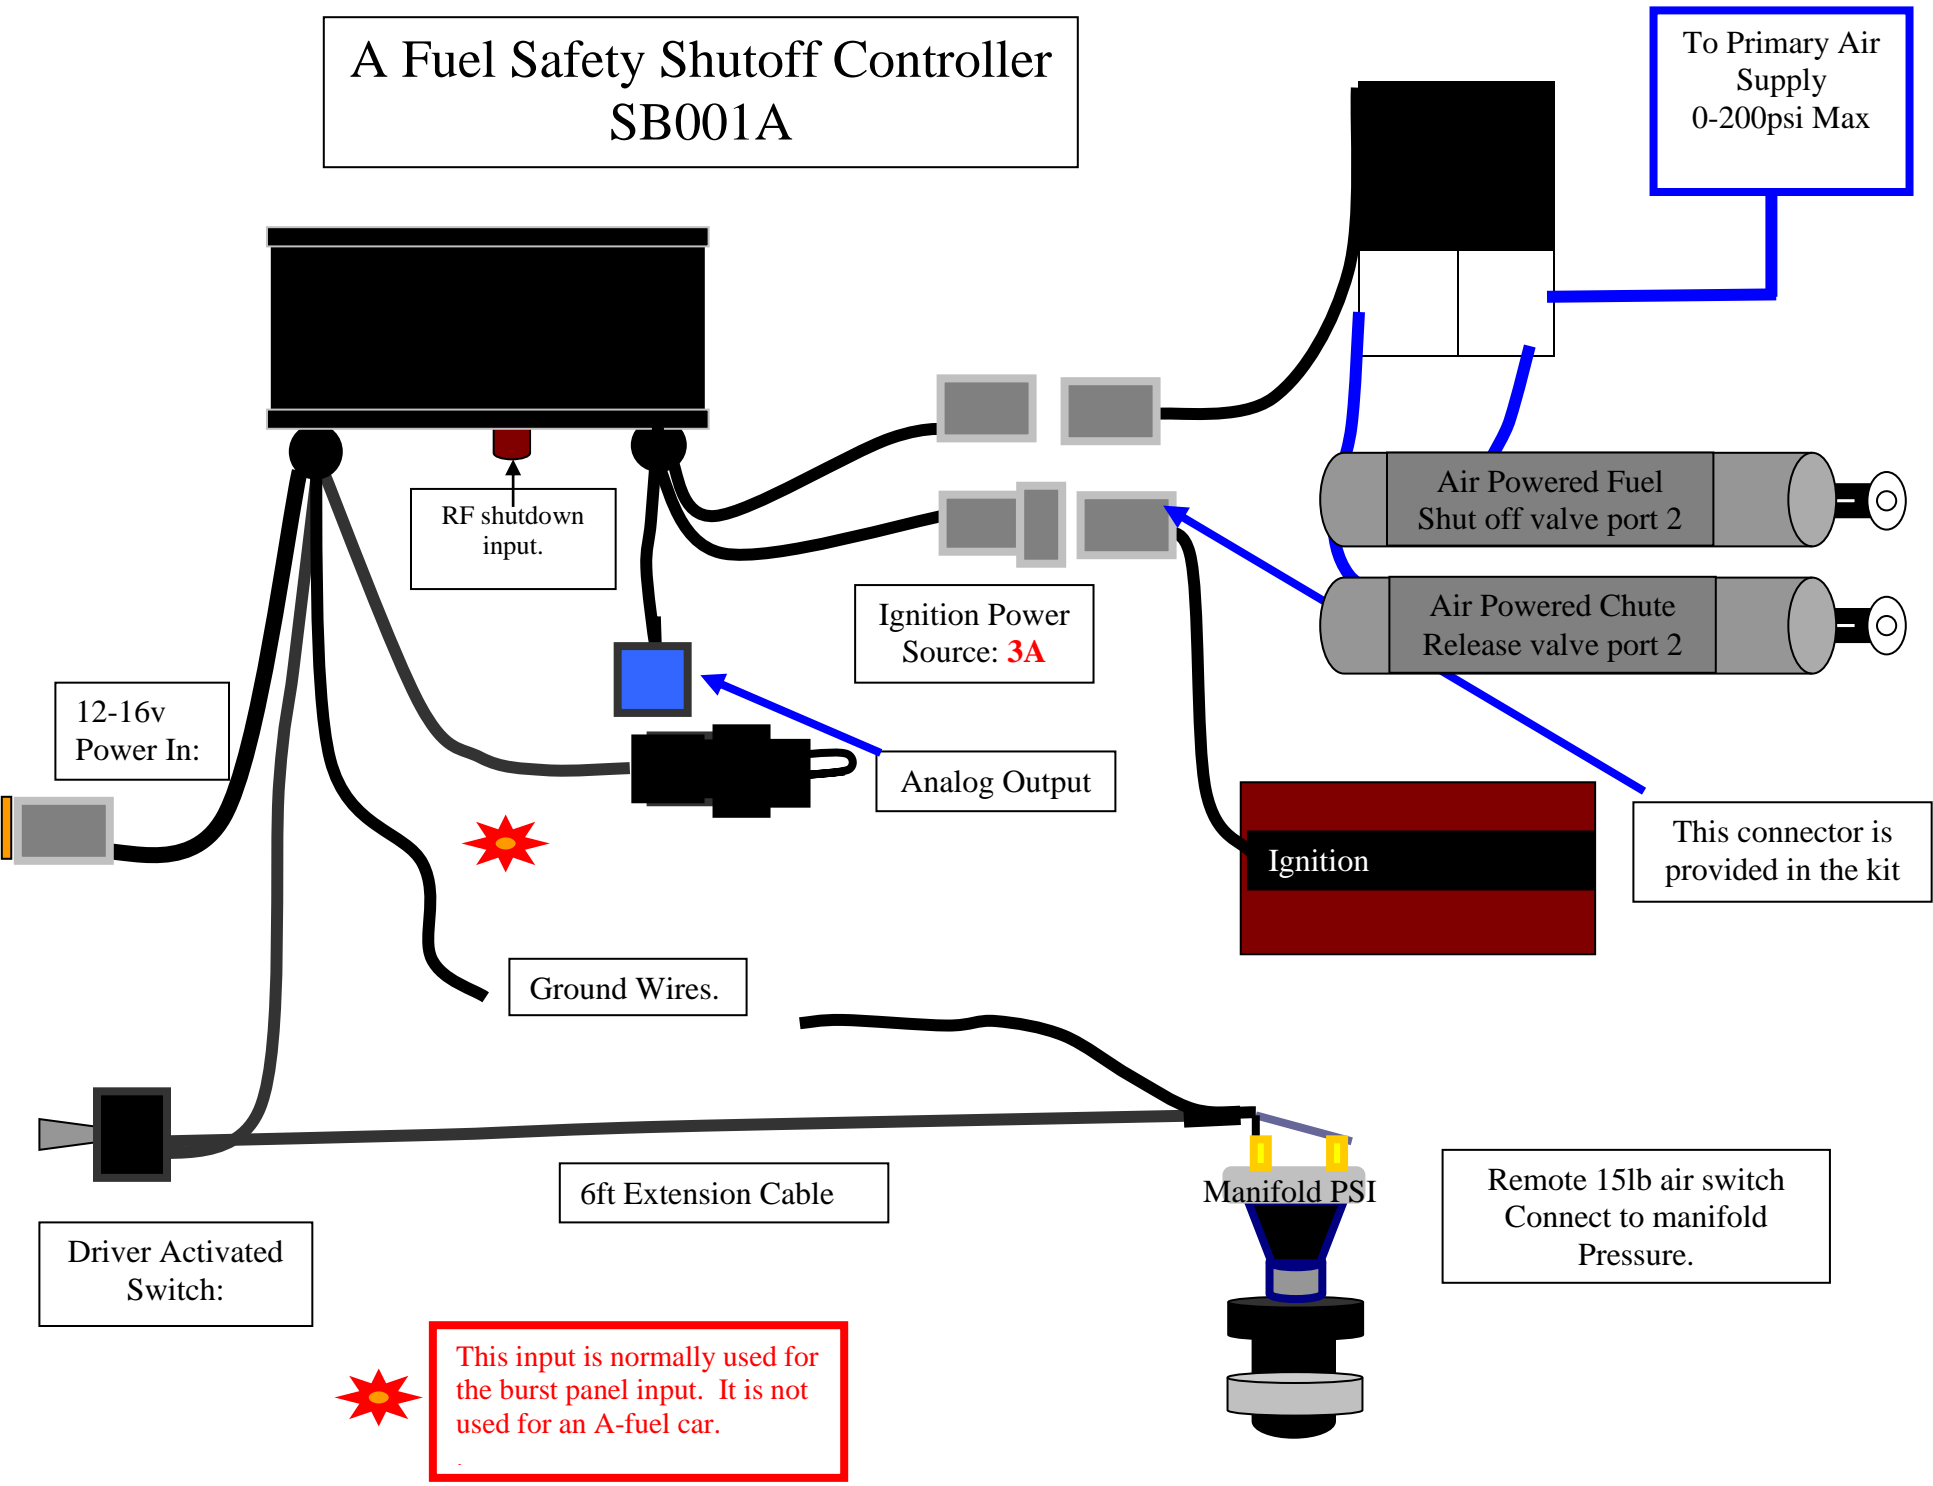

The Electrimotion Safety Shutoff box is designed to shut the car off as a result of a catastrophic event. The box has 3 trigger inputs, which will trigger 3 separate output events. The 3 trigger inputs are a manifold pressure input, a driver activated input and a wireless input.

For the manifold input, an air switch is supplied with an extension cable. The air switch is to be installed on a bracket near the motor but not on the motor. **A ¼” air line no more than 3 foot long is required between the manifold and the Air switch.** The wireless input is triggered by an on track transmitter mounted past the finish line.

The 3 outputs are Ignition Power, fuel shutoff air, and parachute air. The fuel and parachute outputs are hi flow air valves. To mechanically complete the system, 2 air cylinders are required. These are available from Clippard @ [http://www.clippard.com/store/byo\\_cylinder/byo\\_stainless\\_details.asp?sku=UDR-14-3](http://www.clippard.com/store/byo_cylinder/byo_stainless_details.asp?sku=UDR-14-3). The suggested air cylinder is 7/8” bore, 3” stroke Fabco PN **F-0875D02-03A** or Clippard PN UDR-14-3 with Rod End RE-1285. The air cylinders are available from EM upon request. Typical installations for both fuel shutoff and chute activation are shown on the following pages. The Ignition power output is a 2 pin Deutsch connector. **Only** connect the MSD 8971/8168 to the Ignition power output. **(Max Current 2A)**. If no retard system is used, the ignition system must be shut off via the Chute or Fuel shutoff air that is provided. This can be done by using an “Air Kill” device or even the use of another air cylinder to manually press a kill button that you may already have.

When either of the inputs becomes true, the 3 outputs will immediately trigger.

The controller will receive power from the existing +12-16v battery pack that is already used.

**Both air valves must be connected to the primary air supply.**

Dimensions of the box are 4.5”W x 2.0H x 1.75”D.

# Analog Output Table

The SB001A has an analog (0-5v) output (Blue Molex Connector) that will help you determine which event triggered the Safety Box. The Chart below shows each voltage change for each input.

The Blue Molex Analog out connector can be connected to any data logger 0-5v input.

		0.25V	0.5V	1V	2V	Voltage Change
Output Voltage	Standby Voltage	Tether	Fire Bottle	RF Input	RF override	
0.25	X					Standby
0.5	X	X				Tether Enabled
0.75	X		X			FB Enabled
1	X	X	X			Tether and FB enabled
1.25	X			X		RF enabled
1.5	X	X		X		RF and Tether enabled
1.75	X		X	X		RF and FB enabled
2	X	X	X	X		RF and Tether and FB enabled
2.25	X				X	RF override enabled
2.5	X	X			X	RF override and Tether enabled
2.75	X		X		X	RF override and FB
3	X	X	X		X	RF override and FB and Tether
3.25	X			X	X	RF override and RF
3.5	X	X		X	X	RF override and RF and Tether
3.75	X		X	X	X	RF override and RF and FB
4	X	X	X	X	X	RF override and RF and FB and Tether

## A Fuel Safety Box Kit PN SB001AFA

Part	Qty	Part Number
Safety Box	1	SB001A
15lb Air Switch (Manifold Pressure)	1	n/a
Toggle Switch (Driver Button)	1	n/a
Ignition Power Connector (if required)	1	n/a
High Flow Air Switches & Hardware	2	n/a
7/8" Bore Air Cylinders	Not Included	Clippard 7/8" UDR-14-3
PFA Teflon 1/4" Air Line	Not Included	Mc Master Carr PN 51805K86
PFA Teflon 5/32" Air Line	Not Included	Mc Master Carr PN 5733K52

- Do Not use Polypropylene or Polyurethane air lines

### General Warnings:

IT IS THE RESPONSIBILITY OF THE PERSON INSTALLING ANY CONTROL SYSTEM COMPONENT OR KIT TO DETERMINE THE SUITABILITY OF THE COMPONENT OR KIT FOR THAT PARTICULAR APPLICATION. IF YOU ARE NOT SURE HOW TO SAFELY USE THIS COMPONENT OR KIT, YOU SHOULD NOT INSTALL OR USE IT. DO NOT ASSUME ANYTHING. IMPROPERLY INSTALLED OR MAINTAINED CONTROL SYSTEMS ARE DANGEROUS. IF YOU ARE NOT SURE, GET HELP OR RETURN THE PRODUCT. YOU MAY OBTAIN ADDITIONAL INFORMATION AND TECHNICAL SUPPORT BY CALLING ELECTRIMOTION AT (740) 362-0251, OR VISIT OUR WEB SITE AT [WWW.ELECTRIMOTION.COM](http://WWW.ELECTRIMOTION.COM). USE OF ELECTRIMOTION TECHNICAL SUPPORT DOES NOT GUARANTEE PROPER INSTALLATION. YOU, OR THE PERSON WHO DOES THE INSTALLATION, MUST KNOW HOW TO PROPERLY USE THIS PRODUCT. IT IS NOT POSSIBLE OVER THE PHONE TO UNDERSTAND OR FORESEE ALL THE ISSUES THAT MIGHT ARISE IN YOUR INSTALLATION. LIABILITY ON DEFECTIVE MERCHANDISE OR MERCHANDISE NOT CONFORMING TO MANUFACTURER'S SPECIFICATIONS IS LIMITED TO THE REPAIR OR REPLACEMENT OF THE DEFECTIVE ITEM. RACING EQUIPMENT MUST BE MAINTAINED AND SHOULD BE CHECKED REGULARLY FOR FATIGUE, DAMAGE, AND WEAR. DO NOT OPERATE ANY VEHICLE ON UNTESTED CONTROL SYSTEMS!

## Typical Mounting of Fuel and Parachute Air Cylinders.

